

USER'S MANUAL
BLIND REMOTE CONTROL "ERESTORE" AND "ERESTORE RE"

ERESTORE, functions:

- Open blind;
- Close blind;
- Interrupt the blind opening;
- Interrupt the blind closing;
- Function with LS32 and LSE22 remote controls;
- Permit the use of a ERESTORE_RE remote control;
- Permit the use of a ERESTORE_RE general remote control;

Note: Consult your supplier to take advantage of the remote controls ref. LS32., LSE22 and the remote module ref. ERESTORE_RE.

CONVENTIONS:

Functions will be referred between “-“, keys between (-) and visual indicators [-].

INDICATORS

[RED LED] – visual indicator of the blind's opening.

[YELLOW LED] – visual indicator of the blind's closing.

KEYS

(▲) – key to open the blind.

(▼) – key to close the blind.

1.0 - SPECIFICATIONS:

* **Command ref. ERESTORE**

Permits:

- Sixteen programs. (Through the configuration of the dipswitch. See pic. 1)
- Regulation of the blind opening level.
- Open blind.
- Close blind.
- Commutation of stair with remote module ERESTORE_RE.

* **Infrared remote control ref. LS32**

Permits:

- Regulation of the blind opening level.
- Open blind.
- Close blind.
- Command three blinds or group of blinds in the same room. LIGHTING 1 – 2 – 3
- Range up to 10 metres.

* **Infrared remote control ref. LSE22**

Permit:

- Regulation of the blind opening level.
- Open blind.
- Close blind.
- Command one blind in each room. (Enable one more zone if you configured the keys designated to the blinds.
- Range up to 10 metres.

1.0 - TECHNICAL CHARACTERISTICS

- Tension of power supply 220/230V – 50 Hz.

2.0 – PRECAUTIONS

- Do not use abrasive or solvent cleaners.
- Do not apply liquids directly.

3.0 – REGULATION OF THE OPENING LEVEL

Can be done in two ways:

* With remote control:

- LS32 by pressing one of the (LIGHTING+) or (LIGHTING-) keys of the correspondent zone.
- LSE22 by pressing one of the (▲) or (▼) keys.

* Press manually one of the keys to open (▲) or close (▼).

4.0 – OPEN/CLOSE

- *OPEN:*

* With remote control:

- LS32 press (LIGHTING+) key of the correspondent zone.
- LSE22 press (▲) key.

* Manually:

- One quick touch in the (▲) key open the blind completely.
- Hold and press (▲) key until the blind reach the desired level.

- *CLOSE:*

* With remote control:

- LS32 press (LIGHTING -) key of the correspondent zone.
- LSE32 press (▼) key.

* Manually:

- One quick touch in the (▼) key close the blind completely.
- Hold and press (▼) key until the blind reach the desired level.

In case of non-functioning with the remote controls check if the configuration of the program interrupters of the remote control ERDIMMER corresponds to the zone of the remote control in use (see pic. 1).

1.0 - REMOTE MODULE Ref. ERESTORE RE

* The use method of the remote control ERESTORE_RE is the same as the main remote control ERESTORE.

ERMAX

Material of Control and Security, Lda.

Rua de Santo António n.º 22

Recta da Granja

2725-596 MEM MARTINS

Tel. 351 219 26 15 73

Fax. 351 219 20 70 72

E-mail: geral@ermaxlda.com

Site: www.ermaxlda.com