

# USER'S MANUAL REMOTE CONTROL "LSE22"

## CONVENTIONS:

All functions will be referred between “-“, keys between (-) and visual indicators [-▲].

## INDICATORS

[LED] – visual indicator of function execution;

## KEYS

(TV.ON/OFF) – Key to turn on and turn off the TV.

(TV.CHANNEL.+) – Key to increase the TV channel.

(TV.CHANNEL.-) – Key to reduce the TV channel.

(TV.VOLUME.+) – Key to increase the TV volume.

(TV.VOLUME.-) – Key to reduce the TV channel.

(SOUND.ON/OFF) – Key for INPUT selection.

(SOUND.CHANNEL.+) – Key to increase the FM station;

(SOUND.CHANNEL.-) – Key to reduce the FM station;

(SOUND.VOLUME.+) – Key to increase the SOUND volume.

(SOUND.VOLUME.-) – Key to reduce the SOUND volume.

(LIGHT.ON/OFF) – Key to turn on or turn off the LIGHTS;

(LIGHT.CHANNEL1.+) – Key to increase the lightning intensity of zone 1.

(LIGHT.CHANNEL1.-) – Key to reduce the lightning intensity of zone 1.

(LIGHT.CHANNEL2.+) – Key to increase the lightning intensity of zone 2.

(LIGHT.CHANNEL2.-) – Key to reduce the lightning intensity of zone 2.

(\* ) – Key to turn on or turn off the air conditioning;

(▲) – Key to open the blinds;

(▲) – Key to close the blinds;

(▶) – Key to open the curtain;

(◀) – Key to close the curtain;

## 1.0 - SPECIFICATIONS

- 5 keys to command the TV with function learning;
- 5 keys to command the sound;
- 5 keys to command 2 illuminations zones;
- 4 keys to command blinds and curtains;
- 1 key for additional function;

## 2.0 - TECHNICAL CHARACTERISTICS

- Power supply: 2 batteries of 1,5V Lr03 AAA;
- Dimensions: 170x43x18 mm;
- Keys in silicone;
- Plastic box ABS;
- Range up to 6 metres.

### **3.0- MANUTENTION**

1.Clean frontal panel, in case of damage contact authorized reseller.

### **4.0 - PRECAUTIONS**

- 2.Do not use abrasive cleaners;
- 3.Do not apply liquids directly;

### **5.0 - TV SET KEYS**

Program the TV SET keys:

\*Point the original remote control of the television, to the remote control LSE22, see pic.;

\* Press simultaneously keys (SOM.ON/OFF) and (LIGHT.ON/OFF) for 3 seconds;

\* [LED] lights on;

\* Press (TV.VOLUME.+) key

\* [LED] blinks one time;

\* Press correspondent key to the increase volume of the original remote control;

\* [LED] blinks one time;

\* Wait until the [LED] blinks twice as a confirmation of correct code;

\* The [LED] remains lighted;

\* Proceed the same way for the other keys;

\* After programming all television keys, press key (SOM.ON/OFF);

\* [LED] blinks two times and all programmed keys remain memorized.

**Note: All codes of the programmed keys remain in memory even without batteries.**

### **6.0 - SOUND KEYS**

(SOUND.ON/OFF) – Key of INPUT selection in the models Ref. ERAMP1802-S, ERAMPTCL 202-S and ERAMPLCD;

(SOUND.CHANNEL.+) – Key to increase FM station in models Ref. ERAMP1802-S, ERAMPTCL 202-S and ERAMPLCD;

(SOUND.CHANNEL.-) – Key to reduce FM station in models Ref. ERAMP1802-S, ERAMPTCL 202-S and ERAMPLCD;

(SOUND.VOLUME.+) – Key to increase the SOUND volume in the models Ref. ERAMP1802-S, ERAMPTCL 202-S and ERAMPLCD;

(SOUND.VOLUME.-) – Key to reduce the SOUND volume in the models Ref. ERAMP1802-S, ERAMPTCL 202-S and ERAMPLCD.

## **6.0 - LIGHT KEYS**

(LIGHT.ON/OFF) – Key to turn on or turn off LIGHTS referring to the designated zones as channel 1 and channel 2, through the installation of the receptor module ref. ERDIMMER for each zone;

(LIGHT.CHANNEL1.+) – Key to increase the luminous intensity of zone 1 through the installation of receptor module Ref. ERDIMMER;

(LIGHT.CHANNEL1.-) – Key to reduce the luminous intensity of zone 1 through the installation of receptor module Ref. ERDIMMER;

(LIGHT.CHANNEL2.+) – Key to increase the luminous intensity of zone 2 through the installation of receptor module Ref. ERDIMMER;

(LIGHT.CHANNEL2.-) – Key to reduce the luminous intensity of zone 2 through the installation of receptor module Ref. ERDIMMER;

**NOTE: In case of non-functioning with remote controls check if the dipswitch configuration (pic. 2) of the command ERDIMMER corresponds to the zone of the remote control in use.**

## **6.0 - BLIND KEYS**

(▲) – Key to open the blinds through the installation of module ERESTORES;

(▼) – Key to close the blinds through the installation of module ERESTORES;

**NOTE: In case of non-functioning with remote controls check if the dipswitch configuration (pic. 2) of the command ERESTORES corresponds to the zone of the remote control in use.**

## **6.0 - CURTAINS KEYS**

(▶) – Key to open the curtain through the installation of module ERCURTAINS;

(◀) – Key to close the blinds through the installation of module ERCURTAINS;

**NOTE: In case of non-functioning with remote controls check if the dipswitch configuration (pic. 4) of the command ERCURTAINS corresponds to the zone of the remote control in use.**